


A SANDWICH SEAM - FACTORY PRE-APPLIED ADHESIVE

APPLICATION NOTES: SANDWICH FACTORY SEAM

- 1) LINE UP TOP LAYER OF PRETAK TO BOTTOM SHEET FACTORY SEAM LINE
- 2) REMOVE RELEASE LINER COVERING ADHESIVE EDGE ON BOTTOM OF SHEET
- 3) ROLL HEAVY ROLLER OVER TOP SHEET SEAM SEVERAL TIMES WHILE APPLYING SIGNIFICANT PRESSURE
- 4) VERIFY SEAM IS COMPLETELY BONDED
- 5) REPAIR ANY FISHMOUTHS OR POOR SEAM BONDS WITH PRETAPE AND PM SEALANT



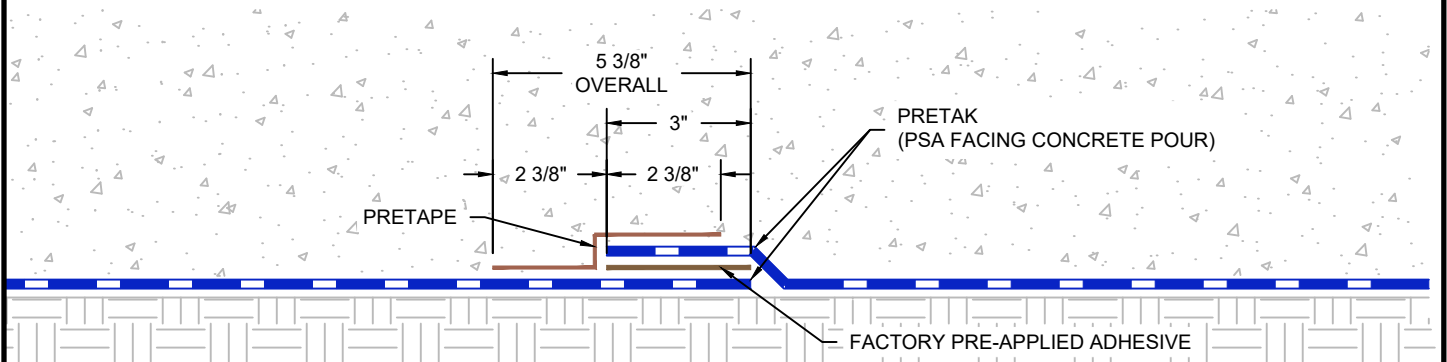

B REINFORCED SEAM - FACTORY PRE-APPLIED ADHESIVE

* REINFORCED SEAM REQUIRED FOR SHOTCRETE APPLICATIONS AND HYDROSTATIC WATER TABLE CONDITIONS

- 1) APPLY SANDWICH SEAM (FACTORY PRE-APPLIED ADHESIVE)
- 2) REMOVE RELEASE LINER COVERING PSA EDGE ON BOTTOM AND TOP OF SHEET
- 3) REMOVE PRETAPE RELEASE LINER COVERING ADHESIVE
- 4) CENTER PRETAPE EVENLY OVER SEAM AND ADHERE PRESSING DOWN ONTO SEAM
- 5) ROLL HEAVY ROLLER OVER PRETAPE SEAM SEVERAL TIMES WHILE APPLYING SIGNIFICANT PRESSURE
- 6) VERIFY SEAM IS COMPLETELY BONDED
- 7) REPAIR ANY FISHMOUTHS OR POOR SEAM BONDS WITH PRETAPE AND PM SEALANT

G:\My Drive\Epro Master Folder\Drafting\Details\Underslab\Pretak\51.110.7.1 SEAM OPTIONS - FACTORY PRE-APPLIED ADHESIVE.dwg [Detail] April 12, 2021 - 1:20pm

SEAMS OPTIONS - FACTORY PRE-APPLIED ADHESIVE

	SYSTEM NAME	DRAWING NUMBER	
	PRETAK	51.110.7.1	
	DRAFTER	DATE	
	RJT	3/17/2021	

AS A SUPPLIER OF FINISHED RPRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1