


C SANDWICH SEAM - TAPED

APPLICATION NOTES: SANDWICH NON-FACTORY SEAM


- 1) APPLY PRETAPE D ONTO PSA SURFACE TO LOCATION OF OVERLAP SEAM
- 2) OVERLAP TOP LAYER OF PRETAK OVER BOTTOM SHEET (MIN 3")
- 3) REMOVE PRETAPE D RELEASE LINER AND ADHERE SHEETS TOGETHER
- 4) ROLL HEAVY ROLLER OVER TOP SHEET SEAM SEVERAL TIMES WHILE APPLYING SIGNIFICANT PRESSURE
- 5) VERIFY SEAM IS COMPLETELY BONDED
- 6) REPAIR ANY FISHMOUTHS OR POOR SEAM BONDS WITH PRETAPE AND PM SEALANT

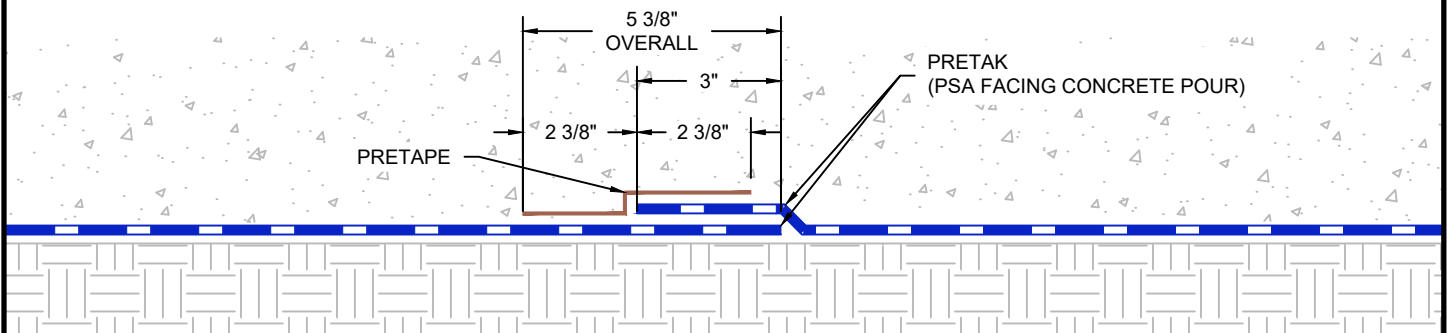

D POSITIVE SIDE LAP SEAM - TAPED

APPLICATION NOTES: POSITIVE LAP SEAM

- 1) OVERLAP TOP LAYER OF PRETAK OVER BOTTOM SHEET (MIN 3")
- 2) REMOVE RELEASE LINER COVERING PSA EDGE ON TOP AND BOTTOM SHEET
- 3) REMOVE PRETAPE RELEASE LINER COVERING ADHESIVE
- 4) POSITION PRETAPE EVENLY CENTERED OVER CENTER OF SEAM AND ROLL OUT ONTO SEAM
- 5) ROLL HEAVY ROLLER OVER PRETAPE SEAM SEVERAL TIMES WHILE APPLYING SIGNIFICANT PRESSURE
- 6) VERIFY SEAM IS COMPLETELY BONDED
- 7) REPAIR ANY FISHMOUTHS OR POOR SEAM BONDS WITH PRETAPE AND PM SEALANT

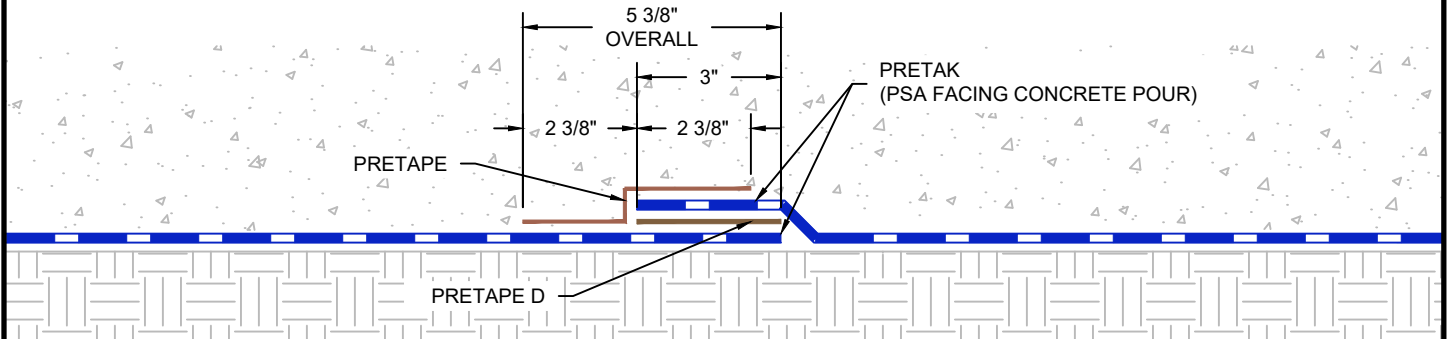



E REINFORCED SEAM - TAPED

* REINFORCED SEAM REQUIRED FOR SHOTCRETE APPLICATIONS AND HYDROSTATIC WATER TABLE CONDITIONS

G:\My Drive\Epro Master Folder\Drafting\Details\Underslab\Pretak\51.110.7.2 SEAM OPTIONS - TAPED.dwg [Detail] April 12, 2021 - 1:20pm

SEAM OPTIONS - TAPED

	SYSTEM NAME	DRAWING NUMBER	
	PRETAK	51.110.7.2	
	DRAFTER	DATE	
	RJT	3/25/2021	

AS A SUPPLIER OF FINISHED PRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1