




STEP 1:  
CUT A 12"X12"  
PRETAK SQUARE

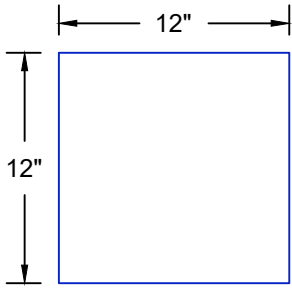


STEP 2:  
FOLD THE SQUARE IN  
HALF IN BOTH  
DIRECTIONS TO FIND  
THE CENTER OF THE  
PRETAK SQUARE

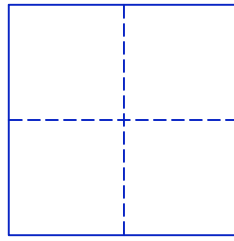


STEP 3:  
CUT ONE FOLD LINE TO  
THE CENTER OF THE  
PRETAK SQUARE

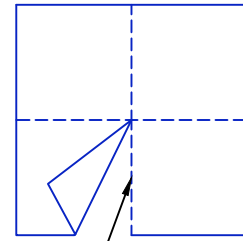

STEP 4:

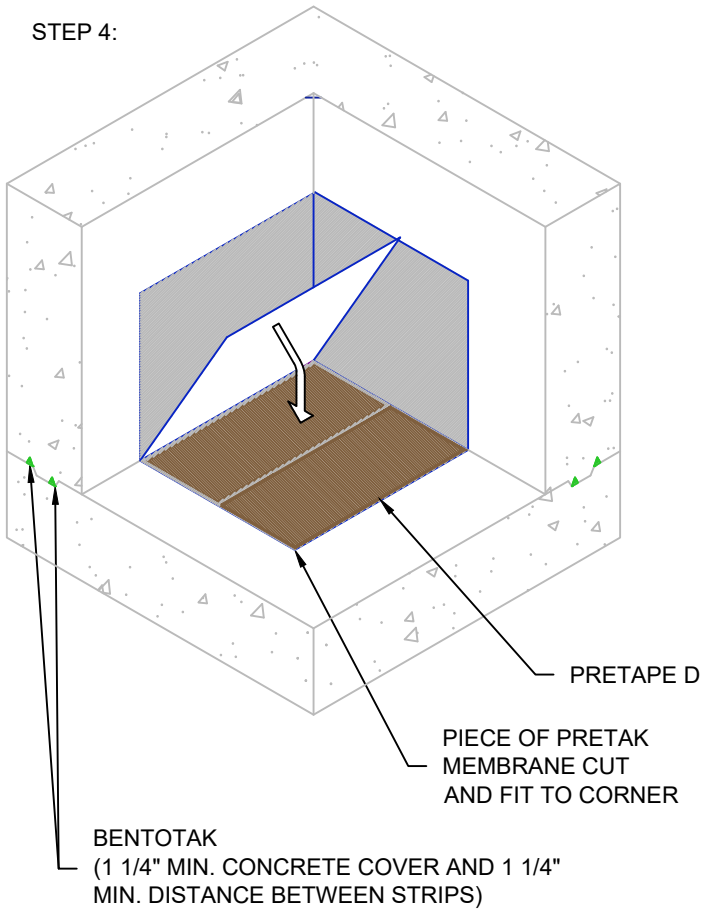

STEP 5:

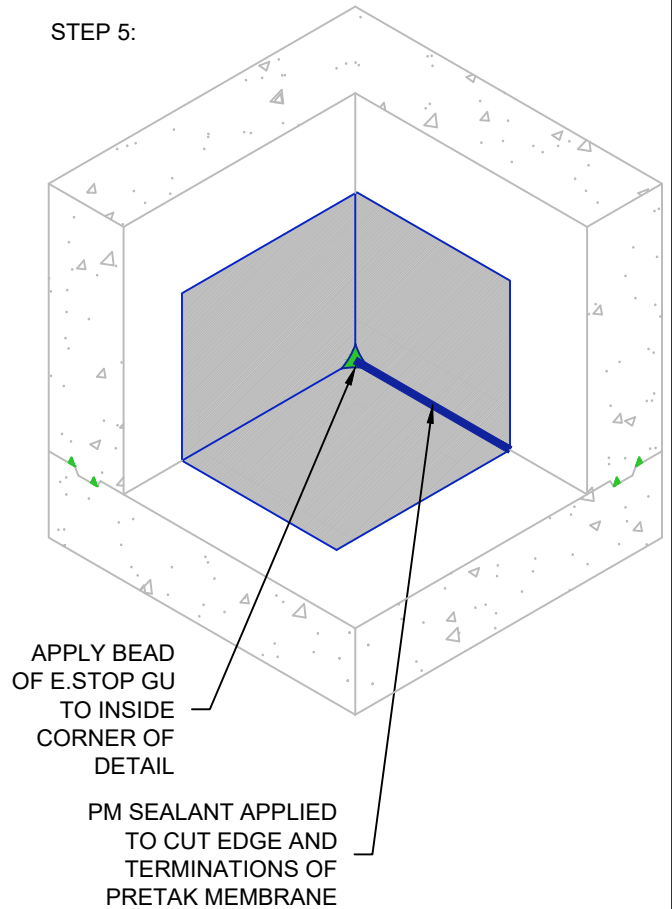

G:\My Drive\Epro Master Folder\Drafting\Details\Shoring\Pretak\51.381.3 CORNER - INSIDE - FIELD FORMED.dwg [Detail] April 12, 2021 - 9:30am

**CORNER - INSIDE - FIELD FORMED**



SYSTEM NAME	DRAWING NUMBER
PRETAK	51.381.3
DRAFTER	DATE
RJT	4/06/2021



AS A SUPPLIER OF FINISHED PRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1