



STEP 1:  
 APPLY PRETAK TO ONE SIDE OF CORNER  
 WITH A MINIMUM OF 6" EXTENDING PAST  
 CORNER'S EDGE.  
 CUT FOLD AT BOTTOM OF SHEET AND TURN  
 VERTICAL SECTION AROUND CORNER AND  
 LEAVE HORIZONTAL LEG EXTENDED.

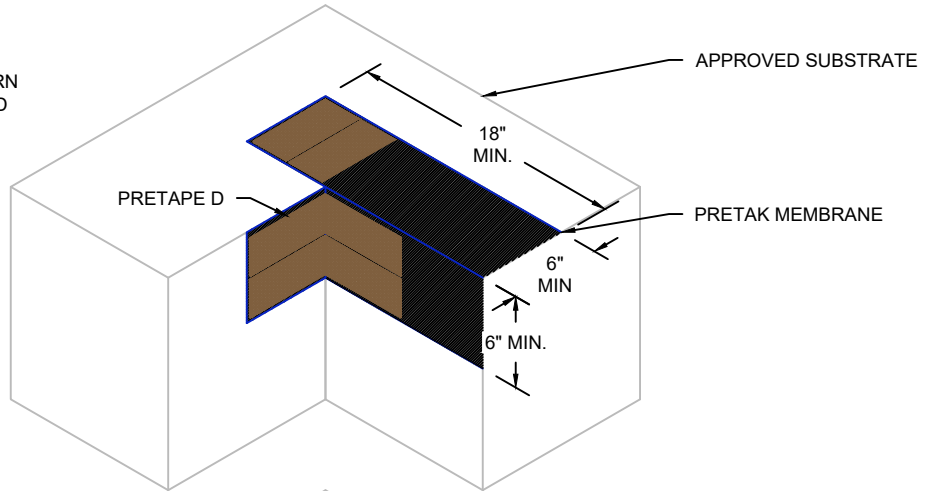

STEP 2:  
 APPLY PRETAPE D TO  
 AREAS COVERED BY  
 SECOND SHEET


STEP 3:  
 APPLY SECOND PRETAK SHEET TO  
 OPPOSITE SIDE OF CORNER WITH A  
 MINIMUM OF 6" EXTENDING PAST  
 CORNER'S EDGE.  
 CUT FOLD AT BOTTOM OF SHEET AND  
 TURN VERTICAL SECTION AROUND  
 CORNER TO OVERLAP FIRST SHEET AND  
 OVERLAP HORIZONTAL LEGS.

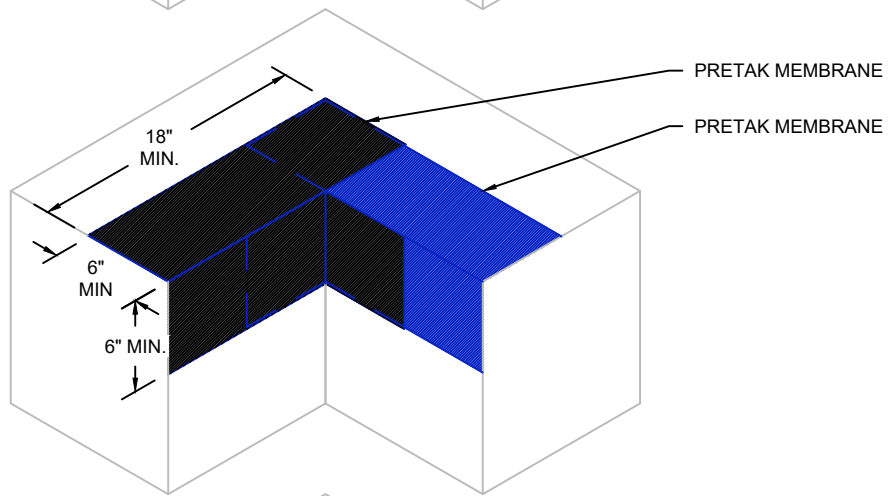

STEP 4:  
 REMOVE RELEASE LINER  
 FROM PRETAPE D AND  
 ADHERE SECOND SHEET  
 TO FIRST SHEET



STEP 5:  
 APPLY BEAD OF E.STOP GU TO INSIDE  
 CORNER OF DETAIL

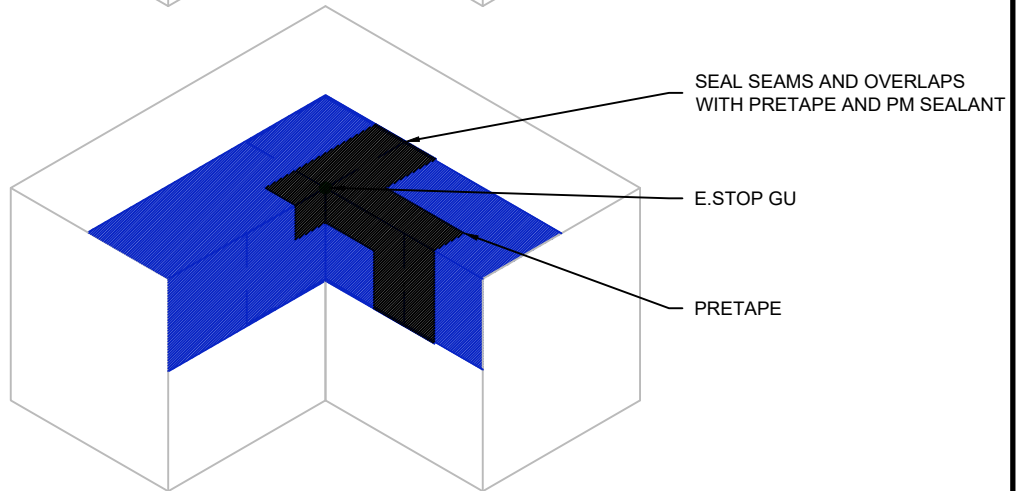STEP 6:  
 APPLY PRETAPE AT THE SEAM BETWEEN  
 THE TWO SHEETS



G:\My Drive\Epro Master Folder\Drafting\Details\Shoring\Pretak\51.381.4 CORNER - TOPSIDE - INSIDE - FIELD FORMED.dwg [Detail] April 12, 2021 - 9:31am

### CORNER - TOPSIDE - INSIDE - FIELD FORMED

	SYSTEM NAME	DRAWING NUMBER	
	PRETAK	51.381.4	
	DRAFTER	DATE	
	RJT	3/25/2021	

AS A SUPPLIER OF FINISHED RPRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1