




STEP 1:
CUT A 12"X12"
PRETAK SQUARE

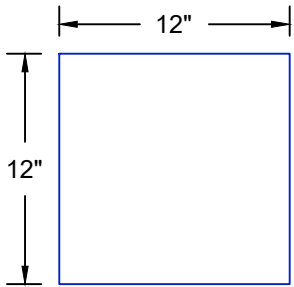


STEP 2:
FOLD THE SQUARE IN
HALF IN BOTH
DIRECTIONS TO FIND
THE CENTER OF THE
PRETAK SQUARE

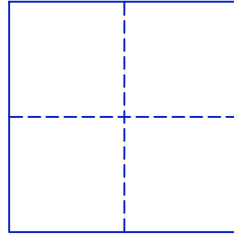

STEP 3:
CUT ONE FOLD LINE TO
THE CENTER OF THE
PRETAK SQUARE

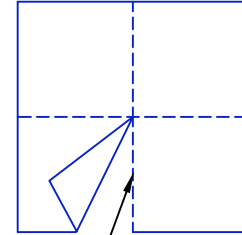


STEP 4:

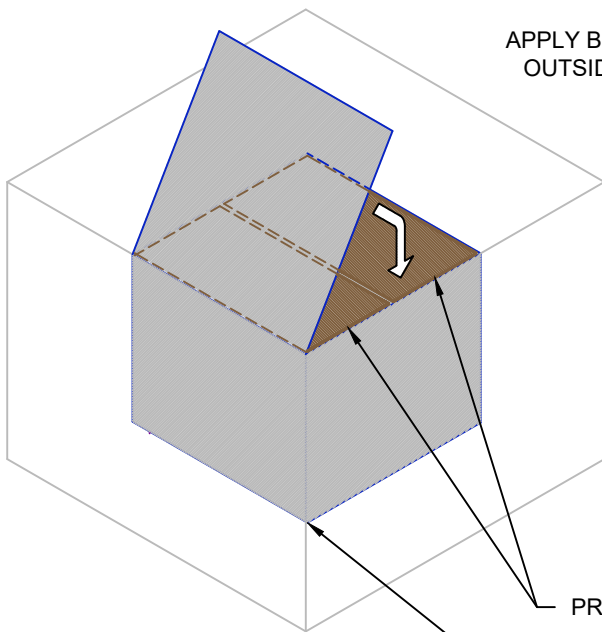

STEP 5:

PM SEALANT APPLIED TO CUT
EDGE AND TERMINATIONS OF
PRETAK MEMBRANE

APPLY BEAD OF E.STOP GU TO
OUTSIDE CORNER OF DETAIL

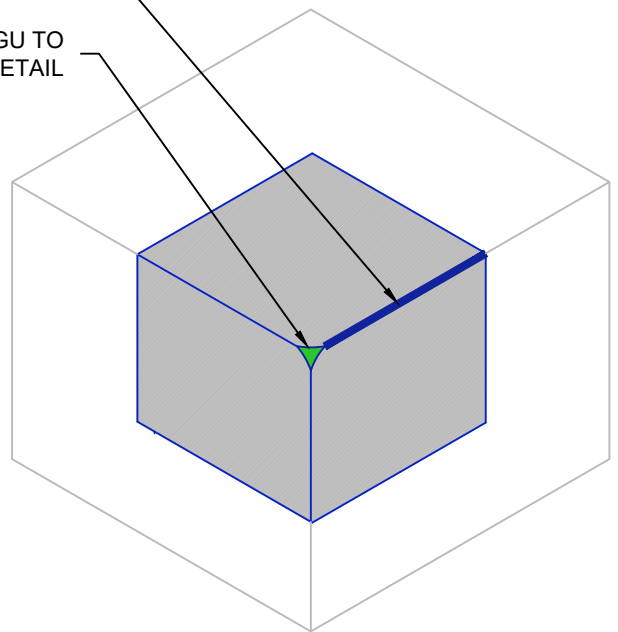

PRETAPE D

PIECE OF PRETAK MEMBRANE CUT
AND FIT TO CORNER

G:\My Drive\Epro Master Folder\Drafting\Details\Shoring\Pretak\51.381.5 CORNER - TOPSIDE - OUTSIDE - FIELD FORMED.dwg [Detail] April 12, 2021 - 9:41am

CORNER - TOPSIDE - OUTSIDE - FIELD FORMED



SYSTEM NAME	DRAWING NUMBER
PRETAK	51.381.5
DRAFTER	DATE
RJT	3/25/2021

PRETAK

AS A SUPPLIER OF FINISHED RPRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1